

Blades are adjusted by loosening one nut and tightening the other. Each reamer expands to the next size.



Increase Reamer Diameter



Decrease Reamer Diameter