

## **Fuse Assembly**

1. **Disconnect the battery cable from the starter switch.**
2. **Remove the two screws on the engine side of the starter switch on top of the starter.**
3. **Place the new fuse assembly over the two screw holes on the starter switch and re-install the screws.**
4. **Remove the wire on starter switch that goes to the terminal box and attach the wire terminal to the stud on the fuse assembly.**
5. **Attach the wire terminal from the fuse assembly to the stud on the starter switch.**
6. **Re-attach the heavy starter cable to the stud on the starter switch.**
7. **Install the fuse into the fuse assembly.**

**NOTE:** If at some future time your car doesn't start, the first thing to check is the fuse.