

ACCESSORIES

	Page
Cowl lights—bodies fitted for	411
Cigar lighter—price	379
Clock	308-330
Clock—windshield header bracket	308-444
Cowl lamps	329
Cowl lamp lens and gaskets obsolete	529
Fender lamps	329
Folder—accessories	371
Sales suggestions—accessories	335
Seat covers	348
Seat covers—special carton	362
Spring covers	268-316
Spring cover installation	268-316-347
Tire cover—fabric	228
Tire cover—metal—new	467-554
Top boots	251
Trunk	364
Trunk rack	355
Windshield wings	251
Windshield wing bracket adjustment	451
Warning—heater removal	340
Window display—accessories	334

AXLE—REAR

(Also See Differential)

Axle shaft length—new (truck)	375
Axle (truck) description and servicing	413
Axle—changes in shafts and gears	556
Grease retainer installation	361-266
Wheel bearing—change	557

BATTERY

Battery ground connector bolt and washer— new	441
Battery parts replacement—Model "T"	506
Battery price lowered	479
Battery sales suggestions	501-551
Battery testing	502-514
Battery trouble	503-505
Bracket—new	290
Cable and support—new	395
Cable—old and new	289-454
Cable—warning	218-246
Change in parts	400
Check electrolyte	302
Failure—causes	391-505
Inspection and cleaning	446-505-519
Installation	211
Keep display battery clean	514
Price reduction	409
Sale and delivery	302
Warning—cover installation	302

BEARINGS—MAIN

Exchange main bearing caps	332
Main bearing line reamed measurement	218
Oil grooves in main bearings	582

BEARINGS—MAIN—Continued

	Page
Rear main bearing cap—cast design	336
Rear main bearing cap bolt—new	336
Rear main bearing cap—service (rough and finished)	358-395
Rear bearing cap oil pipe assembly	306
Rear main bearing cap and bolt	411
Rear main bearing cap—oil pipe changed	441
Warning—oil through rear main bearing	326

BENDIX

(See Starter Drive)

BODY (CAR)

Back curtain fastener	343
Bolts—keep tight	246-371
Bolt reinforcement	395
Business coupe landau irons	275
Cabriolet back curtain assembly	444
Cabriolet body—sectional view	402
Change in door lock assembly	569
Cleaning sport coupe top material	246-367-444
Coupe seat adjustment	257
Coupe window—adjustable	582
Cushion—change in construction	467
De Luxe Delivery package tray installation	369
Designed for cowl lamp installation	411
Filler block length increased	577
Front seat hinge—short—new	438
New coupe deck front pillar	566
Panel delivery rear door latch and pillar— new	344-554
Phaeton and roadster door handles—new	302
Rear deck door striker plate relocated	411
Rear filler block—new	483
Roadster fastener strap	444
Roadster side curtains—installation	509
Roadster back curtain window frame cushion bumpers	266
Roadster and coupe deck door support—new	283
Sport coupe body sectional view	396
Standard coupe body sectional view	388
Taxicab rear door handle—new	376
Town sedan body sectional view	372
Town sedan body squeak	354
Tudor front seat adjustment	231
Tudor body sectional view	380
Ventilation front compartment	284
Victoria coupe top deck installation	521
Weather strip open car doors	447
Window regulator handle	244

BODY (TRUCK)

Mounting heavy duty hydraulic dump truck body	488
Mounting light duty hydraulic dump truck body	491
Mounting rotary power hoist dump truck body	493

BODY (TRUCK)—Continued

Mounting gravity dump body.....	495
Mounting hand hoist dump body.....	497
New body pillars for canopy top express.....	555
Special seat back assembly.....	562

BRAKES AND BRAKE LINKAGE

Adjustment.....	202-259
Brake cross shaft.....	259
Brake cross shaft guide (truck)—new.....	326
Brake cross shaft (lubricator fittings added).....	276
Brake retracting spring—changed.....	410
Brake rod retracting spring—attaching to new spring shackle bracket (truck).....	464
Brake carrier plate—lugs added.....	482
Diagram.....	264-300
Emergency brake adjustment.....	265
Emergency brake cross shaft—change.....	449
Emergency brake equalizing.....	265
Emergency brake lever—change.....	483
Emergency brake lever bushing (truck).....	339
Emergency brake lever noise.....	337
Emergency brake lever releasing.....	439
Exchange brake drums.....	332
Exchange brake shoes.....	332
Housing plate obsoleted.....	451
Housing plate rear—new (truck).....	411
Installation brake linings.....	509
Pedal boss—shortened.....	350
Pedal bushing lengthened.....	512
Pedal lubricator fitting added.....	454
Pedal to cross shaft rod.....	284
Pull rod adjustment.....	202
Pull rod—non-adjustable type.....	259
Rear brake rocker arm—new (truck).....	328
Rear lever cam lubricator (truck).....	343
Solid brake cross shaft—installation and adjustment.....	297-299-326
Warning—lubricating car.....	230
Warning—machining brake drums.....	514
Warning—washing car.....	230

BREAKER POINTS

Adjustment.....	210-346-542
Breaker arm assembly—new.....	289
Breaker arm assembly "gyp".....	514
Breaker points checking.....	439
Cleaning and adjustment.....	246-371

BUMPERS

Bumper bar—length changed.....	484
Bumper bar—spare wheel guard.....	467
Bumper cross bar type—rear.....	230
Change in rear bumper arm and bracket.....	563
New truck bumper.....	510
Rear bumper extension—new.....	483
Rear bumper arm cross brace.....	582

BUSHINGS

Bushings marked to insure correct installation.....	511
---	-----

CARBON REMOVING

Carbon removing.....	219-220
Carbon removing—warning.....	246

CARBURETOR

Accelerator rod offset on De Luxe phaeton.....	465
Adjustments.....	208
Carburetor used with new cowl tank.....	561
Changes.....	280
Choke lever—redesigned.....	302
Cleaning.....	207-258
Cold engine starting.....	208
Cold weather starting.....	208
Diagram.....	206
Needle valve seat change—seat integral with bowl.....	415
Parts identification.....	208-443
Replacement of bowl.....	443
Throttle control assembly—new and old design.....	337
Throttle lever stop screw shortened.....	482
Trouble shooting hints.....	207

CLEANERS AND POLISHES

Body polish—liquid—Ford.....	331
Body polish—liquid—Lincoln.....	260
Body polish—wax.....	520
Cleaner—paste.....	520
Cleaner—upholstery.....	444
Nickel polish—Lincoln.....	260-331
Cleaning sport coupe top material.....	246-367-444

CLOCK

Clock.....	308-330
Clock—windshield header bracket.....	308-444

CLUTCH

Assembling.....	224
Diagram.....	221
Difference between car and truck.....	351
Disassembling.....	223
Disassembling from transmission.....	223
Exchange.....	296
Heat cracks in pressure plate.....	398
Housing hand hole cover—new design.....	326
Installing in car.....	225
Lubricating release bearing.....	230
Marking changed (truck).....	418
Overhaul.....	222
Pedal boss—shortened.....	350
Pedal bushing lengthened.....	512
Pedal clearance (correction page 218).....	203-398-464
Pedal lubricator fitting added.....	454
Pedal shaft replacement.....	336
Plate floor board.....	248
Release arm and fork—change in installation.....	351

CLUTCH—Continued

	Page
Release bearing hub—longer lubricator fitting added (truck).....	422
Release bearing hub—longer lubricator boss (truck).....	482
Release shaft bushing—changed (truck).....	482
Release shafts—difference in old and new designs.....	509
Single plate—new.....	296-297
Single plate—new—installation.....	340
Warning—oiling clutch.....	327
Wear—causes of.....	221

COIL

Coil—cleaning.....	446
Coil—troubles.....	462

CONNECTING RODS

Aligning.....	314
Exchange.....	332
Fitting.....	218-244-315
Installation.....	244
Markings indicating genuine Ford.....	519
New—keep separate from old.....	375
Reaming.....	315

COVERS

Seat—door—fender.....	256-292-348
Seat—special carton.....	362
Spring.....	268-316
Spring—installation.....	268-347-316
Tire—fabric.....	228
Tire—metal—new.....	467-554
Top—dust hood.....	251

COWL LAMPS

Cowl lamps.....	329
Cowl lamp—lens and gasket obsolete.....	529
Bodies designed for cowl lamp installation.....	411

COWL TANK

Cap.....	257
Cap gasket—new.....	378
Capacity.....	227
Cowl tank—new—in replacement of old.....	561
Gauge—change in frame.....	555
Gauge—repair sticking.....	259
Filler screen head—new.....	441
Filler screen purpose.....	311
New dial and float rod assembly.....	463
Valve handle—new.....	337
Warning on gauge removal.....	218

CRANKSHAFT

End clearance measurement.....	218
--------------------------------	-----

CURTAIN

Curtain back—cabriolet.....	27
Curtain fastener.....	26
Curtain—side installation.....	26
Curtain—back window frame cushion bumper—roadster.....	26

CUSHION

Cushion—change in construction.....	26
-------------------------------------	----

CUT OUT

New bolt for attaching wires to.....	26
--------------------------------------	----

CYLINDER HEAD

Caution when replacing.....	26
Gasket—new.....	26
Keep nuts tight.....	26
New design.....	26
New cylinder head outlet hose (truck).....	26
Stud—change in length.....	26
Tightening.....	26

DIFFERENTIAL—TRUCK AND CAR

Bevel gear—new (truck).....	412-413-404
Bevel gear—replacing worm type (truck).....	412
Bevel gears—high speed (truck).....	412
Differential case screw—change (truck).....	547-566
Drive gear and pinion—new.....	327
Drive shaft and splines changed (truck).....	327
Driving pinion bearing shims (truck).....	327
Driving pinion and retainer (truck).....	327
Gear ratio—how distinguished (truck).....	327
Gear reduction—new (truck).....	327
Housing—changed (truck).....	327
Housing gaskets—new for service (truck).....	327
Housing sold in pairs (worm type axle) (truck).....	327
Housing reinforcements (truck).....	327
Housing length—new (truck).....	327
Lubrication.....	327
Oil capacity.....	327
Oil holes added in driving pinion (car).....	327
Thrust bearing cap—new (truck) (correction page 351).....	327
Ring gear and differential case (truck)—new.....	412

DISTRIBUTOR

Distributor body change.....	506
Distributor body notch—not to be altered.....	480
Distributor breaker arms—"gyp".....	504
Distributor cam shafts—drilling.....	480
Distributor heat baffle plate.....	388
Distributor inspection.....	486
Distributor lubrication.....	246

DRAG LINKS

Drag link ball plugs tightened.....	375
Drag link installation.....	290

DUST HOOD

Dust hood—roadster and phaeton top.....	251
---	-----

ELECTRICAL

Electrical system.....	215
Electrolock—Ford type.....	213-214
Winter electrical troubles.....	382-504

ENGINE

Breather cap—new and old.....	326
Breather pipe—new.....	358-454
Camshaft—three bearing.....	311
Camshaft—rear bearing oil hole.....	342-343
Cold weather starting.....	400
Clearances and limits in assembly.....	574
Cylinder boring cutter—grinding.....	306
Cylinder block—reinforced.....	359
Cylinder head cautions when replacing.....	246
Cylinder head gasket—new.....	382
Cylinder head installation—tightening.....	218
Cylinder head—keep nuts tight.....	289-375
Cylinder head—new.....	382
Cylinder head outlet hose—new (truck).....	464
Cylinder head stud—change in length.....	366
Exhaust manifold—strengthened.....	550
Exhaust manifold gasket—new.....	312-562
Front end support—new flexible (truck).....	310
Front end support—new flexible—in- stallation.....	294-295-296
Front end support—157" truck.....	528
Front end support spring—new.....	358
Front end support spring—strengthened.....	582
Front end support spring—truck.....	376
Lubrication.....	291-302
New valve springs.....	484
Numbers.....	228-542
Oil capacity.....	227
Oil pan tray change.....	576
Oil pump shield.....	576
Overheating.....	566
Pan change.....	393
Poor idling.....	359
Rear support redesigned.....	439
Removing carbon.....	219-220
Removing carbon—warning.....	246

EXCHANGE POLICIES

Bearing caps—main.....	332
Brake shoes.....	332
Brake drums.....	332
Clutch.....	296
Connecting rods.....	332
Generator armature.....	332
Hub and drum assembly.....	332

FAN

Belt adjustment.....	204
----------------------	-----

FENDERS

Fender lamps.....	329
Fordor rear.....	394
Front brackets—change.....	512

FENDERS—Continued

Front brackets—new.....	394-556
Installation on town sedan, three window or taxicab.....	360
Well.....	249
Well—spare wheel carrier.....	249

FLOOR BOARDS AND MATS

Floor boards—obsolete (truck).....	392
Floor boards—old design not carried for service.....	281
Floor mats—dump body.....	534
Floor mats—new design.....	569
Floor mat—obsolete (truck).....	392

FLYWHEEL

Bolts changed.....	331
Housing—cleaning for dropped bolts or nuts.....	423
Housing—drain hole cotter pin—purpose.....	218
Housing installation measurement.....	218
Installation measurement.....	218

FRAME

Cross member front—new.....	387
Cross member front—new (truck).....	310
Cross member front—new (157" truck).....	528
Cross member front—old design with new spring clip.....	312
Cross member front—reinforcement (truck).....	518
New design (truck).....	553
New 157" truck frame.....	532
Servicing old style side members and cross members (truck).....	443-552

GASOLINE MILEAGE TESTER

Gasoline mileage tester—operation.....	485
Gasoline mileage tester—using with new cowl tank.....	569

GASOLINE TANK (See Cowl Tank)

GENERATOR

Armature—careless handling.....	391
Changes in generator rear end plate, armature and pulley.....	345-447-455
Charging rate.....	209-302-345
Charging rate adjustment.....	209-258
Cold weather trouble.....	383
Conduit generator to terminal block—new design.....	423
Exchange—armature.....	332
Inspection and cleaning commutator.....	446-505
Lubrication.....	382
New bolt for attaching wires to generator cutout.....	457
Special low speed generator for radio equipped cars.....	561
Terminal bushing changed.....	481

GLASS		HUBS—Continued	
	Page		Page
Glass chart.....	250	Rear hub gasket (truck).....	276
Installation—windshield.....	226	Rear hub and drum assembly—removing.....	290
Markings.....	563	Sleeve made integral with hub.....	576
Warning.....	230	Use "AR" wheels with "AR" hubs—"B" wheels with "B" hubs.....	328
Shatterproof replacement by other companies.....	424	Warning—machining brake drums.....	514
GREASE RETAINERS			
Grease retainers—correct installation rear axle.....	361	IGNITION	
Grease retainers—installation torque tube.....	266	Coil—cleaning.....	446
HANDLES			
Handle—door—roadster and phaeton—new... ..	302	Coil troubles.....	452-462
Handle—door—taxicab—rear.....	376	Conduit clip and stud—change.....	366
Handle—lighting switch.....	517	Ignition wire installation—truck.....	462
Handle—window regulator.....	244	Installation—coil to distributor wire.....	462
HANGERS			
Hangers—spring—changed.....	546	Spark lever—retard when starting.....	315
Check regularly.....	537	Spark plug gap.....	446-454-542
HOIST			
Hoist—dump body—(hand) increased lifting power.....	518	Spark plug inspection and cleaning.....	446
Hoist (hydraulic) engine oil used in cylinder... ..	519	Switch—Ford type electrolock.....	213
HOOD			
Hood bumper—new.....	561	Timing.....	210-346
Hood clip assembly—installation.....	513	Trouble shooting.....	213-214
Hood hinge rod—cadmium plated.....	562	Warning on electrical work.....	246
Hood rattles.....	359	HEADLAMPS	
HORN			
Adjustment.....	227-420	Aligning and focusing.....	211-212-323
Bracket—redesigned.....	452	Bulbs—32 c. p.....	510
Care.....	227-420	Bulbs—32 c. p.—installation and replacements.....	572
Cold weather trouble.....	383	Bulbs burning out.....	383-504
Cover—difference in designs.....	266	Change in plugs and terminals.....	361-457
Inspection and cleaning.....	446-505	Flickering.....	544
Instructions for ordering parts.....	266	Inspection.....	446
Lubrication.....	227-420	Lighting switch handle assemblies—difference..	517
HUBS			
Adapter for scalloped hubs (truck).....	529	Lighting switch handle assembly—new.....	340
Hub bolt markings changed (truck).....	362	New design.....	322-323
Hub bolt nuts (truck).....	302	Single bulb reflector—change.....	362
Hub bolts—new (truck).....	366	Switch—inspection and cleaning.....	446
Hub caps.....	282	Switch—new design.....	329
Hubs—difference.....	377	Wire loom—keep away from radiator support bracket.....	465
Hub and drum assembly—exchange policy.....	332	HEATER	
Hub and drum assembly—rear installation (truck).....	557	Heater—remove in summer.....	340
Hub front—new.....	347	INSTRUMENT PANEL	
Rear hubs—new (truck).....	418	Instrument panel light cap.....	399
Rear hub bolts—new (truck).....	418	Instrument panel light wire installation.....	462
IRONS			
Irons—business coupe, landau.....			
Irons—business coupe, landau.....			
Irons—business coupe, landau.....			
J			
K			
Key record.....			
Key sale.....			
L			
Labor schedule—additional.....			
Labor schedule—correction.....			

LAMPS

	Page
Cowl lamps.....	329
Cowl lamps—bodies designed for installation.....	411
Cowl lamp—lens and gaskets obsolete.....	529
Dash lamp—cap.....	399
Dash lamp wire—installation.....	462
Fender lamps.....	329
Headlamps—aligning and focusing.....	211-212-323
Headlamp bulbs—32 c. p.....	510
Headlamp bulbs—32 c. p.—installation and replacements.....	572
Headlamp bulbs—burning out.....	383-505
Headlamp—change in plugs and terminals.....	361-457
Headlamp flickering.....	544
Headlamp inspection.....	446
Headlamp lighting switch handle assemblies—difference.....	517
Headlamp lighting switch handle assembly—new.....	340
Headlamp—new design.....	322-323
Headlamp reflectors—cleaning.....	577
Headlamp single bulb reflector—change.....	362
Headlamp switch—inspection and cleaning.....	446
Headlamp switch—new design.....	329
Headlamp wire loom—keep away from radiator support bracket.....	465
Sportlight bulb.....	572
Sportlight and installation.....	308-327-416
Sportlight bracket and template—new.....	456
Sportlight installation—sedans and cabriolet.....	351-360
Sportlight installation—roadster and phaeton.....	452
Sportlight installation—victoria coupe.....	534
Stoplight bulb—special 32 c. p.....	572
Stoplight mounting—dump truck bodies.....	498
Stoplight mounting—dump truck bodies—optional method.....	566
Stoplight—servicing old design.....	440
Stoplight switch installation—new design.....	416
Stoplight wires—servicing old design.....	440

LICENSE

License plate clip—new.....	351
-----------------------------	-----

LOCK

Lock cylinders—interchangeable.....	516-544
Lock cylinders—removing.....	528
Lock cylinder A-46116-R obsoleted.....	577
Lock—door—change.....	569
Lock—spare wheel and tire.....	267
Lock—spare wheel and tire (interchangeable cylinder).....	556
Lock—spare wheel and tire (fender well).....	267
Lock—spare wheel and tire (taxicab).....	331

LUBRICATION

Chart.....	216
Differential.....	375
Engine.....	291
Front spring through hole in starter crank bearing.....	359-360

LUBRICATION—Continued

	Page
Generator.....	382
"Gyp" fittings.....	424
New lubricator fitting brake cross shaft.....	276
New lubricator fitting brake pedal.....	454
New lubricator fitting clutch release bearing (truck).....	422
New lubricator fitting clutch pedal.....	454
New lubricator fitting steering gear housing.....	281
New lubricator fitting water pump cover.....	454
New lubricant front wheel bearings.....	568
Power take-off.....	550
Rear brake cam (truck).....	343
Rear brake camshaft.....	230
Steering gear.....	377
Shock absorber connecting links.....	205-568
Transmission.....	227-375
Warning—oiling distributor.....	246

MANIFOLD

Manifold—exhaust—strengthened.....	550
Manifold—gasket—new.....	312-562

MISCELLANEOUS

Clean shop.....	292 and 470 to 478
"Gyp" bearings.....	460
"Gyp" parts.....	424-460-550
Power car washer.....	275
Repair order—show mileage.....	371
Squeaks.....	359
Window display.....	285-374-479
Winter electrical troubles.....	382-504

MUFFLER

Long outlet pipe installation.....	558
Outlet pipe bracket (truck) obsoleted.....	442
Outlet pipe clamp—new.....	327
Outlet pipe station wagon and panel delivery.....	532

N

Numbering system—parts.....	578
Oil pan tray lowered.....	576

OIL PUMP

Body and bushing change.....	394
Shaft change.....	238
Shield.....	576
Spring installation.....	423

P

Package tray installation—De Luxe delivery.....	369
---	-----

PAINT

Body colors.....	310
Solicitation.....	228

PARTS

	Page
Parts numbering system	578
"Gyp" parts	424-460-550

PEDALS (BRAKE AND CLUTCH)

Brake and clutch pedal boss shortened.....	350
Brake and clutch pedal bushing lengthened....	512
Brake and clutch pedal lubricator fitting added. 454	
Clutch pedal clearance (correction page 218)	203-398-464

PISTONS

Fitting.....	204-455
Markings on pistons.....	545
New slotted and old strut design.....	339
Oil holes in piston.....	576
Pin retainer.....	358-366
Pin retainer—service.....	366
Pin retainer service—new.....	390
Rings—fitting.....	204
Rings—oversize.....	508
Ring pressure.....	576
Solid skirt—new.....	312-313
Wrist pins—change in diameter.....	339
Wrist pin fitting.....	218
Wrist pin fitting.....	231-306-455
Wrist pins—"gyp".....	460

PIVOT (SPRING)

Pivot bracket (spring) reinforced (truck).....	484
Pivot seat (spring)—change (truck).....	546
Pivot seat bushing (spring)—change (truck).....	547

POLISHES AND CLEANERS

Body polish—liquid—Ford.....	331
Body polish—liquid—Lincoln.....	260
Body polish—wax.....	520
Cleaner—paste.....	520
Cleaner—upholstery.....	444
Nickel polish—Lincoln.....	260-331

POWER TAKE-OFF

Power take-off—assembly and disassembly... 548-549
--

RADIATOR

Anti-freeze solution.....	288-386-520
Anti-freeze solution—check cooling system before filling.....	375
Bolt and nut—do not tighten too tight.....	377
Bolt and spring change.....	451-452
Cap.....	257
Cap gasket—do not mix with cowl tank cap gasket.....	378
Cap with Moto-Meter.....	267
Cap with ornament.....	267
Capacity.....	227
Cleaning.....	452

RADIATOR—Continued

	Page
Filler flange installation (1930).....	419
Inspect hose connections.....	302
Splash plate—new and old.....	450
Truck—new.....	450
Special radiator rod for service (truck).....	448

RADIUS ROD

Ball end installation.....	218
Front—new (truck).....	392

REAR VIEW MIRROR

Bracket—change.....	562
Bracket—length increased.....	440
Bracket—obsolete.....	562
Mirror—change.....	562

RECORDS

Repair orders.....	371
Repair order for minor repairs.....	401
Service follow up.....	252
Service follow up report.....	401

SEAT

Seat adjustment—coupe.....	257
Seat adjustment—Tudor.....	231
Seat back assembly—special (truck).....	562

SERVICE RECORDS

Follow up.....	252
Inspections.....	302
Repair orders—show mileage.....	371

SHACKLES

Shackle bracket (spring)—new (truck).....	464
Shackle bushing (spring)—installation (truck)..	347
Shackles—long (spring)—to lower loading height of body (truck).....	552

SHOCK ABSORBERS

Adjustment (correction page 311).....	205-258-302-353
Adjustment—change in method.....	282
Adjustment—warm weather.....	446
Arm changed (width of boss increased).....	367
Arm changed.....	455
Care.....	205
Change in needle valve.....	511-562
Clamp bolt nut tightened.....	218
Lubricating connecting links.....	205-568
New shock absorber fluid.....	467
Perch ball—new—not integral with perch.....	419
Pointer striking brake rods.....	282
Service instructions.....	536-573
Warm weather inspections.....	446

SPARK

	<i>Page</i>
Spark lever—retard when starting.....	315
Spark plug gap.....	446-454-542
Spark plug inspection and cleaning.....	446

SPARE WHEEL LOCKS AND CARRIERS

Spare wheel carrier—fender well correct installation.....	249-508
Spare wheel carrier—truck mounting.....	528
Spare wheel carrier strengthened.....	511
Spare wheel and tire lock.....	267
Spare wheel and tire lock—interchangeable cylinders.....	556
Spare wheel and tire lock—taxicab.....	331
Spare wheel lock for fender well.....	267

SPEEDOMETER

Change in speedometer gear shaft.....	568
Change in speedometer parts.....	466
Changing—correct method.....	375
Driving gear information.....	392-393
Gear change.....	415
Gears—different ratio axles.....	438
Removing from car.....	246
Service instructions.....	276

SPINDLE

Spindle arm change.....	282
Spindle bolt bearing change.....	282
Spindle bolts—new.....	378
Spindle bolt lock pin—new.....	378

SPORTLIGHT

Sportlight bulb.....	572
Sportlight and installation.....	308-327-416
Sportlight bracket and template—new.....	456
Sportlight installation—sedans and cabriolet.....	351-360
Sportlight installation—roadster and phaeton.....	452
Sportlight installation—Victoria coupe.....	534

SPRINGS AND PARTS (CHASSIS)

Clamp rear spring—location changed (truck)...	552
Clip bar—redesigned.....	367
Clip bar spacer—new (truck).....	399
Clip bolt and nuts—change (truck).....	546
Clip front—change (truck).....	312
Clip—keep nuts tight (truck).....	534
Clip front—new.....	419
Correct springs for body types.....	533
Covers—installation.....	268-316
Front spring—heavy duty—for car.....	510
Front spring—installation.....	276
Front spring—new (truck).....	371
Front spring—service (truck).....	450
Hangers—change.....	546
Hangers—check regularly.....	539

SPRINGS AND PARTS (CHASSIS)
Continued

	<i>Page</i>
Perch ball—new—not integral with perch	419
Pivot bracket reinforced (truck).....	484
Pivot seat—change (truck).....	546
Pivot seat bushing—changed (truck).....	547
Rear spring—correct installation (truck).....	451
Rear spring—heavy duty (truck).....	565
Rear spring—light duty—for fragile loads (truck).....	544
Rear spring—special—48".....	565
Shackle bracket—new (truck).....	464
Shackle bushing—installation (truck).....	347
Shackles—long—to lower loading height of body (truck).....	552
Size of hole in auxiliary spring (engine front end support)—increased.....	463
Spring seats—correct installation (truck).....	532
Spring seat—nut acts as stop for spring seat.....	565
Springs used under model "A" and "AA" chassis	580

SPRINGS (MISCELLANEOUS)

Brake retracting spring—changed.....	410
Brake rod retracting spring—attaching to new spring shackle bracket (truck).....	464
Engine front end support—new.....	358
Engine front end support—truck.....	376
Engine front end support—size of hole in auxiliary spring increased.....	463
Starter drive head springs.....	571
Starter switch spring—new.....	289

STARTER DRIVE

Bendix drive service suggestions.....	512
Bendix drive special replacement.....	303-304-305
Bushing—rear end plate not serviced.....	360
Cold weather starting.....	400
Cold weather trouble.....	382-383
Drive heads.....	572
Drive parts special.....	288
Drive service only—new.....	284
Installing service sleeves.....	571
Motor inspection—cleaning commutator....	446-505
Pinion.....	238
Push rod grommet—new.....	506
Removing starter.....	238
Screw starter drive shaft.....	570
Screw starter drive spring.....	570
Service Bendix sleeve.....	400
Springs—starter drive head.....	571
Switch spring—new.....	289

STARTER CRANK

Crank bearing—new.....	419
Oil hole in starter crank bearing.....	359

STEERING GEAR

Adjustment.....	240-241
Adjustment two-tooth sector type.....	318-363

STEERING GEAR—Continued

	Page
Assembling.....	321-243
Column upper bushing installation.....	399
Disassembling.....	242-321
Diagram.....	240
Housing bushing—change.....	463
Housing gasket—change.....	481
Inspection.....	243
Installation.....	244
Lubrication.....	244-377
Lubricator fitting changed to plug.....	383
Lubricator fitting added.....	281
New—installation and inspection.....	318-322
Oil capacity.....	227
Removing.....	241
Shaft worm and bearing—change.....	481-517
Steering column lengthened.....	422
Warning—anti-shimmy devices.....	311
Wheel installation—obstructs speedometer view.....	230
Worm thrust bearing—change.....	282

STOPLIGHT

Mounting—dump truck bodies.....	498
Mounting—dump truck optional method.....	566
Old—servicing.....	440
Switch installation—new design.....	416
Wires—servicing old design.....	440

SUPPORT—ENGINE FRONT END

Spring—engine front support strengthened.....	582
Spring—engine front end support—new.....	358
Spring—engine front end support—truck.....	376
Support—engine front end—new flexible (truck).....	310
Support—engine front end—new flexible—installation.....	294-295-296
Support—engine front end—157" truck.....	528
Support—engine front end—size of hole increased.....	463

THROTTLE (CARBURETOR)

Control assembly—new and old design.....	337
Control rod offset on De Luxe phaeton.....	465
Lever stop screw shortened.....	482

TIMING

Time gear—fitting measurement.....	218
Time gear—installation marks.....	228
Time gear—test for looseness causing knock.....	422
Timing ignition.....	210-211-346
Timing—warning.....	480

TIRES

Fabric cover installation.....	228-371
Gauges.....	268
Marking.....	218
Metal tire covers.....	467-554

TIRES—Continued

	Page
Mounting correctly.....	307
Pressure.....	231-330
Recommendation—4.75 x 19.....	424
Replacements and spares.....	231
Service instructions.....	307
Tire carrier side panel strap plate (AA panel)—new.....	368
Tires used on truck.....	410
Tread wear variable.....	330
Valve stem double angle (truck).....	456
Wear front wheels.....	283

TOOLS

Axle—front and rear.....	272
Axle—front and rear—how used.....	273-274
Care and condition.....	332
Cylinder boring cutter—grinding.....	306
Drive pinion bearing lock nut.....	340
Power car washer.....	275
Valve grinding vacuum cup.....	204

TOP

Top boots—roadster and phaeton.....	251
Top—cleaning—sport coupe.....	246-367-444
Top—cleaning—Victoria coupe.....	521
Top deck installation—roadster.....	444
Top—stack fastener strap—roadster.....	444
Water repellent solution (for stopping leaks in top decks).....	390

TORQUE TUBE

Grease retainer install.....	266
Lubricator fittings ad.....	463
Roller bearing sleeve.....	513

TRANSMISSION

Assembling (correction page 244).....	234
Bearing spacer—new.....	387
Careless gear shifting.....	387
Case—change.....	311
Countershaft and reverse idler shaft—changed.....	391
Diagram—four speed.....	386
Diagram—four speed.....	233-234
Disassembling (correction page 244).....	386
Dual high transmission lubricant.....	281
Four speed AA trucks.....	385
Gear shift housing cap.....	513
How it operates.....	232-385
Idler shaft change.....	312
Inspection.....	234
Lubrication.....	375
Oil capacity.....	227
Retainer and oil baffle—new.....	379
Shifter lever four speed transmission—adjustment.....	442
Shifter shaft and interlock (truck)—change.....	420
Slipping out of intermediate.....	303
Sliding gears on main shaft—accurate fit.....	303
Transmission main shaft bearing retainer bolt—changed.....	465

TRUNK

	<i>Page</i>
Trunk (luggage carrier).....	364
Trunk (luggage carrier) rack.....	355

UNIVERSAL JOINTS

Assembly and coupling—change (truck).....	414
Housing cap—change.....	350
Hydraulic dump truck bodies.....	547
Lubrication (truck).....	398
Noisy.....	510
New (truck).....	545
Ring rivets shearing.....	395
Servicing A and AA universal joints.....	564
Splines changed.....	367

VALVES

Clearance from push rods (correction page 347).....	338
Guide bushing changed.....	358
Grinding and carbon cleaning.....	219-220
Grinding and push rod clearances.....	231
New exhaust valves.....	529
New valve springs.....	484
Vacuum cup grinder.....	204
Valve chamber cover—change.....	342
Valves—“gyp”.....	519-550
Warning on cleaning carbon.....	246
Warning replacing cylinder head.....	246

WATER PUMP

Impeller washer installation.....	418
New bushings.....	339
New lubricator fittings.....	454
Packing and installation.....	260
Split ring packing.....	378-379
Stopping leak at pump shaft.....	204-230

WHEELS

Bearing front adjustment.....	203-238
Bearing rear wheel—change (truck).....	556
Change in truck disc wheel.....	552
Checking front wheels for side play.....	203
Correct method of installing truck dual wheels.....	458
Dual wheels distance between tires increased.....	528
Front alignment and adjustment.....	239
Front alignment gauge.....	239
Front alignment.....	282
Front alignment—check after tightening ball plugs.....	375
Front camber.....	239-282
Front wheel bearings—new lubricant.....	568
Strap plate side wheel carrier—AA panel.....	368
Side wheel carrier mounting (correction page 542) (truck).....	528
Use “AR” wheels with “AR” hubs; “B” wheels with “B” hubs.....	328

WHEELS—Continued

	<i>Page</i>
Wheel carrier—correct installation fender well.....	249-508
Wheel carrier assembly strengthened.....	511
Wheel carrier assembly—warning mounting wheel.....	550

WINDOW

De Luxe coupe back window—adjustable.....	582
---	-----

WINDSHIELD

Glass warning.....	230
Header leak.....	355
Installation.....	226
Replacement by other companies.....	424
Window glass markings.....	563
Ventilation front compartment.....	284
Wings.....	251
Wing bracket adjustment.....	451

WINDSHIELD WIPER

Automatic.....	306
Blade.....	371-439
Installation electric wiper.....	247-465
Installation vacuum wiper.....	370
Inspection and cleaning—electric wiper.....	446-505
Gears—electric wiper.....	577
Operating arm installation.....	441
Parts list (correction page 416).....	408
Removing from car.....	247
Repair—electric wiper.....	404-405-406-407
Service instructions—electric wiper.....	246-247-248
Service replacement—“A” design with “B” design—electric.....	327
Winter trouble—electric wiper.....	383
Wire installation on present roadster stanchion.....	465

WIRING

Change ammeter and switch wiring.....	390
Clip—headlight wire to hood sill.....	336
Coil to distributor wire installation.....	462
Conduit—terminal block to generator—new design.....	423
Diagram with and without cowl lights.....	324
Diagrams.....	214-215
Diagram—De Luxe Coupe.....	468
Diagram—Fordor.....	291-468
Diagram—Town Sedan.....	356-468
Ignition wire installation (truck).....	462
Instrument panel light wire.....	462
Loom—keep away from radiator support bracket.....	465
Warning—disconnecting wires from instru- ment panel.....	218