

TROUBLESHOOTING & DIAGNOSTICS

CONTENTS

SECTION I ON THE ROAD DIAGNOSTICS

INTRODUCTION	1-1
SPARK & IGNITION DIAGNOSTIC	1-2
SPARK PLUG & COMPRESSION DIAGNOSTIC	1-4
FUEL FLOW & CARBURETION DIAGNOSTIC	1-5
ELECTRICAL CIRCUIT DIAGNOSTIC	1-6
OVERHEATING DIAGNOSTIC	1-8

SECTION II IN SHOP TESTING

INTRODUCTION	2-1
ENGINE PERFORMANCE & OPERABILITY	2-2
Cranking System Diagnostics	2-2
Battery Test	2-2
Battery Cable Test	2-2
Ground Strap Test	2-3
Starter Motor Test	2-3
Ignition & Timing Circuit Diagnostics	2-4
Ignition Primary Circuit Tests	2-4
Testing Ignition Points	2-4
Testing Condenser	2-5
Testing Coil	2-5
Testing Ignition Switch & Cable	2-6
Testing Terminal Box & Ammeter	2-6
Testing For Correct Timing	2-7
Ignition Secondary Circuit Test	2-8
Coil Secondary Winding Test	2-8
Coil Polarity Test	2-9
Alternate Coil Polarity Tester	2-10
Coil High Voltage Tester	2-10
Fuel System Diagnostics	2-10
Testing Fuel Flow	2-10
Testing Fuel System For Air Leaks	2-11
Testing Carburetor	2-12
Rich/Lean Fuel Mixture Test No. 1	2-12
Rich/Lean Fuel Mixture Test No. 2	2-13
Float Level Test	2-13
Float Valve Test	2-13
Idle Air Mixture Test	2-14
Engine Performance Diagnostics	2-15
Compression Gauge Test	2-15
Vacuum Gauge Test	2-16

Vacuum Diagnosis Chart	2-16
Reading Spark Plugs	2-20
Engine Noise Diagnosis	2-24
Cooling System Diagnostics	2-26
Coolant Leaks	2-26
Testing For Exhaust Gases	2-27
Radiator Flow Test	2-28
Radiator Inspection	2-28
Water Pump Failure	2-29
Electrical Circuit Diagnostics	2-30
Testing Charging System	2-31
Testing Cutout Relay	2-31
Testing Electrical Connections	2-32
Testing Ground system	2-33

DRIVETRAIN PERFORMANCE & OPERABILITY	2-35
Clutch Diagnosis	2-35
Clutch Drag	2-35
Clutch Slips	2-36
Clutch Chatters	2-36
Pulsating Clutch Pedal	2-37
Clutch Rattles	2-37
Noise When Clutch Pedal Depressed	2-37
Noise When Clutch Pedal Released	2-37
Clutch Throw Out Bearing Noise	2-38
Pilot Bearing Noise	2-38
Transmission Diagnosis	2-38
Transmission Alignment w/Engine and Drive Shaft	2-38
Transmission Slips Out Of High Gear	2-39
Transmission Slips Out Of Low Gear	2-40
Transmission Slips Out Of Second Gear	2-41
Difficult Shifting	2-41
Noisy In All Gears	2-41
Noisy In Neutral	2-42
Noisy In Low And Reverse Gear Only	2-42
Noisy In Second Gear Only	2-43
Noisy In High Gear Only	2-43
Transmission Leaks Gear Lube	2-43
Differential/Rear End Diagnosis	2-44
Driveline Alignment Check	2-44
Road Testing Differential/Rear End	2-45
Axle/Driveline Noises	2-45
Noise On Acceleration	2-45
Noise On Coast	2-45
Noise On Both Coast And Acceleration	2-46
Noise When Rounding Corners	2-46
Backlash Noise	2-46

TROUBLESHOOTING & DIAGNOSTICS

Vibration Noise	2-46
Differential Bearing Noise	2-46
Ring And Pinion Gear Noise	2-46
Steady Noise On Pull	2-46
Steady Noise On Coast	2-47
Bearing Noise On Pull Or Coast	2-47
Wheel Bearing Noise	2-47
Front End Diagnosis	2-47
Front End Wanders	2-47
Excessive Looseness	2-48
Hard Steering	2-49
Steering Pulls To One Side	2-49
Excessive Tire Wear	2-49
Cupped Tires	2-50
Tires Squeal On Turns	2-50
High Speed Shimmy	2-50
Brake System Diagnosis	2-50
Hard Pedal	2-50
Spongy Pedal	2-51
Brakes Squeal Or Chatter When Applied ..	2-51
Excessive Pedal Travel	2-51
Pull To One Side When Brakes Applied ...	2-52

SECTION III SYMPTOMS, CAUSES & FIXES

INTRODUCTION	3-1
Engine Will Not Start	3-1
Engine Misses One Cylinder While Idling	3-6
Engine Misses any Cylinder Below 20MPH	3-7
Engine Misses At High Speed	3-9
Engine Misses At All Speeds	3-11
Poor High Speed Or Lack Of Power	3-13
Loss Of Engine Compression	3-15
Engine Backfires Through Carburetor	3-16
Pre-Ignition Or Spark Knock	3-16
Excessive Oil Consumption	3-17
Excessive Fuel Consumption	3-18
Fuel Delivery To Carburetor Insufficient	3-20
Ignition Troubles	3-20
Due To Wiring & Connections	3-20
Due To Distributor	3-21
Due To Battery	3-21
Due To Spark Plugs	3-22
Manifold Leaks	3-22
Starter Motor Not Operating	3-23
Generator Not Charging	3-24
Battery Discharges Frequently	3-25
Faulty Lighting	3-25
Engine Over Heating	3-26

Horn Does Not Operate Or Runs Poorly	3-27
Clutch Drags	3-28
Clutch Slips	3-28
Clutch Chatters	3-29
Pulsating Clutch Pedal	3-29
Clutch Rattles When Idling	3-29
Noise When Clutch Pedal Depressed	3-29
Noise When Clutch Pedal Released	3-30
Transmission Slips Out Of High Gear	3-30
Transmission Slips Out Of 2nd Gear	3-30
Transmission Slips Out Of Low Gear	3-31
Transmission Will Not Shift Into 2nd Gear	3-31
Transmission leaks Gear Lube	3-32
Front End Wanders From Side To Side	3-32
Hard Steering	3-33
Steering Pulls To One Side	3-33
Low Speed Shimmy	3-33
High Speed Shimmy	3-34
Tires Squeal On Turn	3-34
Excessive Tire Wear	3-34
Cupped Tire Wear	3-34
Hard Brake Pedal	3-34
Spongy Brake Pedal	3-34
Brakes Squeal Or Chatter When Applied	3-35
Excessive Pedal Travel	3-35
Pulls To One Side When Brakes Applied	3-35
NOISES	3-36
Main Bearing Knock	3-36
Excessive Crank End Play Noise	3-36
Connecting Rod Bearing Knock	3-36
Piston Noise	3-37
Wrist Pin Noise	3-37
Valve Noise	3-37
Timing Gear Knock	3-38
Pre-Ignition Spark Knock	3-38
Oil Pump/Distributor Shaft Noise	3-38
Starter Drive Noise	3-39
Generator Noise	3-39
Water Pump Noise	3-39
Fan & Belt Noise	3-40
Transmission Noisy In All Gears	3-40
Transmission Noisy In Neutral	3-40
Transmission Noisy In Low/Reverse Only	3-41
Transmission Noisy In 2nd Gear Only	3-41
Transmission Noisy In High Gear Only	3-41
Differential Noise On Acceleration	3-41
Differential Noise On Coast	3-41
Differential Noise On Acceleration and Coast ..	3-41
Differential Noise When Rounding Corners ..	3-42
Differential Backlash Noise	3-42
Differential Bearing Noise	3-42
Study Noise On Pull	3-42

TROUBLESHOOTING & DIAGNOSTICS

Study Noise On Coast	3-43
Differential Bearing Noise On Coast Or Pull	3-43
Wheel Bearing Noise At Low Speed	3-43
High Pitch Squeal When Clutch Depressed	3-43
Clutch Chatter When Releasing Clutch Pedal .	3-43
U-Joint/Driveline Noise	3-43
VIBRATIONS	3-44
Engine Vibrations	3-44
Engine Vibration At High Speed Only	3-34
Steering Column Vibration/Rattle at 40MPH ...	3-44

SECTION IV SYSTEM DESCRIPTIONS

INTRODUCTION	4-1
IGNITION CIRCUIT	4-1
Primary Circuit	4-2
Coil	4-2
Points And Condenser	4-3
Important Points To Remember	4-3
Secondary Circuit	4-4
Distributor Cap And Rotor	4-4
Distributor Body	4-4
Spark Plugs	4-5
ELECTRICAL SYSTEM DESCRIPTION	4-7
Fundamentals	4-7
Battery	4-9
Electrolyte	4-10
Discharging	4-10
Charging	4-10
Capacity	4-10
Standard Capacity Ratings	4-11
Battery Life	4-11
Charging A Storage Battery	4-11
Slow Charging	4-11
Starter Motor	4-12
Starter Motor Drive	4-13
Starter Switch	4-13
Ammeter	4-14
Generator	4-15
Basic Generator Principles	4-15
Field Coils	4-16
Armature/Commutator	4-16
Brushes	4-17
Third Brush	4-17
Cutout Relay	4-18
Horn	4-19
Lights	4-21
Stop Light Switch	4-21

FUEL SYSTEM DESCRIPTION	4-22
Fundamentals	4-22
Gas Tank	4-22
Gas Gauge	4-22
Carburetion	4-23
Zenith Carburetor	4-24
Start And Idle Circuit	4-24
Low Speed Circuit	4-25
High Speed Circuit	4-25
Fuel Float	4-26
ENGINE COMBUSTION & OPERATION	4-27
Fundamentals	4-27
Four-Stroke Engine	4-27
Engine Parts And Function	4-28
Cylinder Block	4-28
Cylinder Head	4-29
Piston	4-29
Connecting Rod	4-30
Crankshaft	4-30
Camshaft	4-31
Valves	4-32
Flywheel	4-32
Four Stroke Timing	4-33
Cylinder Timing And Balance	4-34
Cylinder Firing Order	4-34
Stroke vs Timing	4-34
UNDERSTANDING OILING SYSTEM	4-36
Top End Lubrication	4-36
Oil Cooling	4-36
Piston And Rod Cooling	4-36
Oil Pump Action	4-36
Changing Oil	4-37
COOLING SYSTEM DESCRIPTION	4-38
Fundamentals	4-38
Coolant Flow	4-38
Thermo-Syphon System	4-38
Pump System	4-38
Improved Performance	4-39
Two Blade Fan	4-40
Radiator	4-40
TRANSMISSION AND CLUTCH DESCRIPTION ..	4-41
Fundamentals	4-41
Operation	4-42
Low Gear	4-42
2nd Gear	4-42
High Gear	4-43
Reverse Gear	4-43
Precision Assembly	4-43
Gear Lubricant	4-44
Clutch Operation	4-44
Shifting Tower	4-46

TROUBLESHOOTING & DIAGNOSTICS

DIFFERENTIAL/ REAR END DESCRIPTION	4-47
Fundamentals	4-47
Torque Tube	4-47
Drive Shaft	4-47
Axle Housing	4-48
Differential Assembly	4-48
Differential Gears	4-49
Ring And Pinion Gear Ratios	4-50
STEERING AND FRONT END DESCRIPTION	4-51
Fundamentals	4-51
Steering Gear	4-51
Seven Tooth Worm And Sector	4-52
Two Tooth Worm And Sector	4-53
Steering On Thrust Bearings	4-53
Front End Geometry	4-54
Caster	4-54
Camber	4-55
King Pin Inclination	4-56
Tow-In	4-56
Tow-Out	4-56
Front Axle And Radius Rods	4-57
SUSPENSION SYSTEM DESCRIPTION	4-58
Fundamentals	4-58
Transverse Springs	4-58
Chassis Frame	4-59
Shock Absorbers	4-59
BRAKE SYSTEM DESCRIPTION	4-61
Fundamentals	4-61
Service Brakes	4-61
Mechanical Linkage	4-62
Parking (Emergency) Brake	4-63

SECTION V ADJUSTMENTS AND ALIGNMENTS

INTRODUCTION	5-1
SERVICE BRAKE ADJUSTMENT	5-2
Brake Adjustment	5-2
CASTER ADJUSTMENT	5-6
Measuring Caster	5-6
CARBURETOR ADJUSTMENT	5-7
CLUTCH PEDAL ADJUSTMENT	5-8
FAN BELT ADJUSTMENT	5-9
FRONT WHEEL BEARING ADJUST	5-10
GENERATOR CHARGING RATE	5-10
Power House Generator	5-10
Cylinder Style Generator	5-11
HEAD LAMP FOCUSING AND ALIGNMENT	5-11
HORN ADJUSTMENT	5-13

SHOCK ABSORBER ADJUSTMENT	5-13
STEERING ADJUSTMENT	5-14
7-Tooth Steering Shaft	5-14
End Play Adjustment	5-14
7-Tooth Sector Shaft End Play Adjustment	5-15
2-Tooth Sector Shaft End Play Adjustment	5-15
2-Tooth Sector Steering Shaft End Play Adjust	5-16
2-Tooth Sector Worm Mesh Adjustment	5-16
IGNITION TIMING	5-18
TOE-IN ADJUST	5-19
VALVE GRINDING AND ADJUSTMENT	5-20
Grinding and Seating Valves	5-20
Adjusting Valve Clearance (w/Adjustable Valve Lifters)	5-21
FLYWHEEL HOUSING VARIATION	5-22
FLYWHEEL WOBBLE TEST	5-23

SECTION VI TEST INSTRUMENTS FOR TESTING & TROUBLESHOOTING

Digital Multimeter	6-1
Analog Volt/Ohm Meter	6-1
Ignition Timing Test Light	6-2
Carburetor Float Gauge	6-2
Float Level Site Gauge	6-2
Float Valve Test Jar	6-2
Hydrometer	6-3
Compression Gauge	6-3
Vacuum Gauge	6-3
Feeler Gauge	6-3
Coil Polarity Tester (Sparklite)	6-4
Coil High Voltage Tester ('C' Spark)	6-4
Stethoscope	6-4
Protractor Level	6-4
Calibers	6-5
Micrometer	6-5
Flywheel Housing Warp Gauge	6-5
Flywheel Wobble Gauge	6-5
Torque Wrenches	6-5
Tools & Spare Parts For The Touring Tool Box	6-6